


# 14.7 Connections

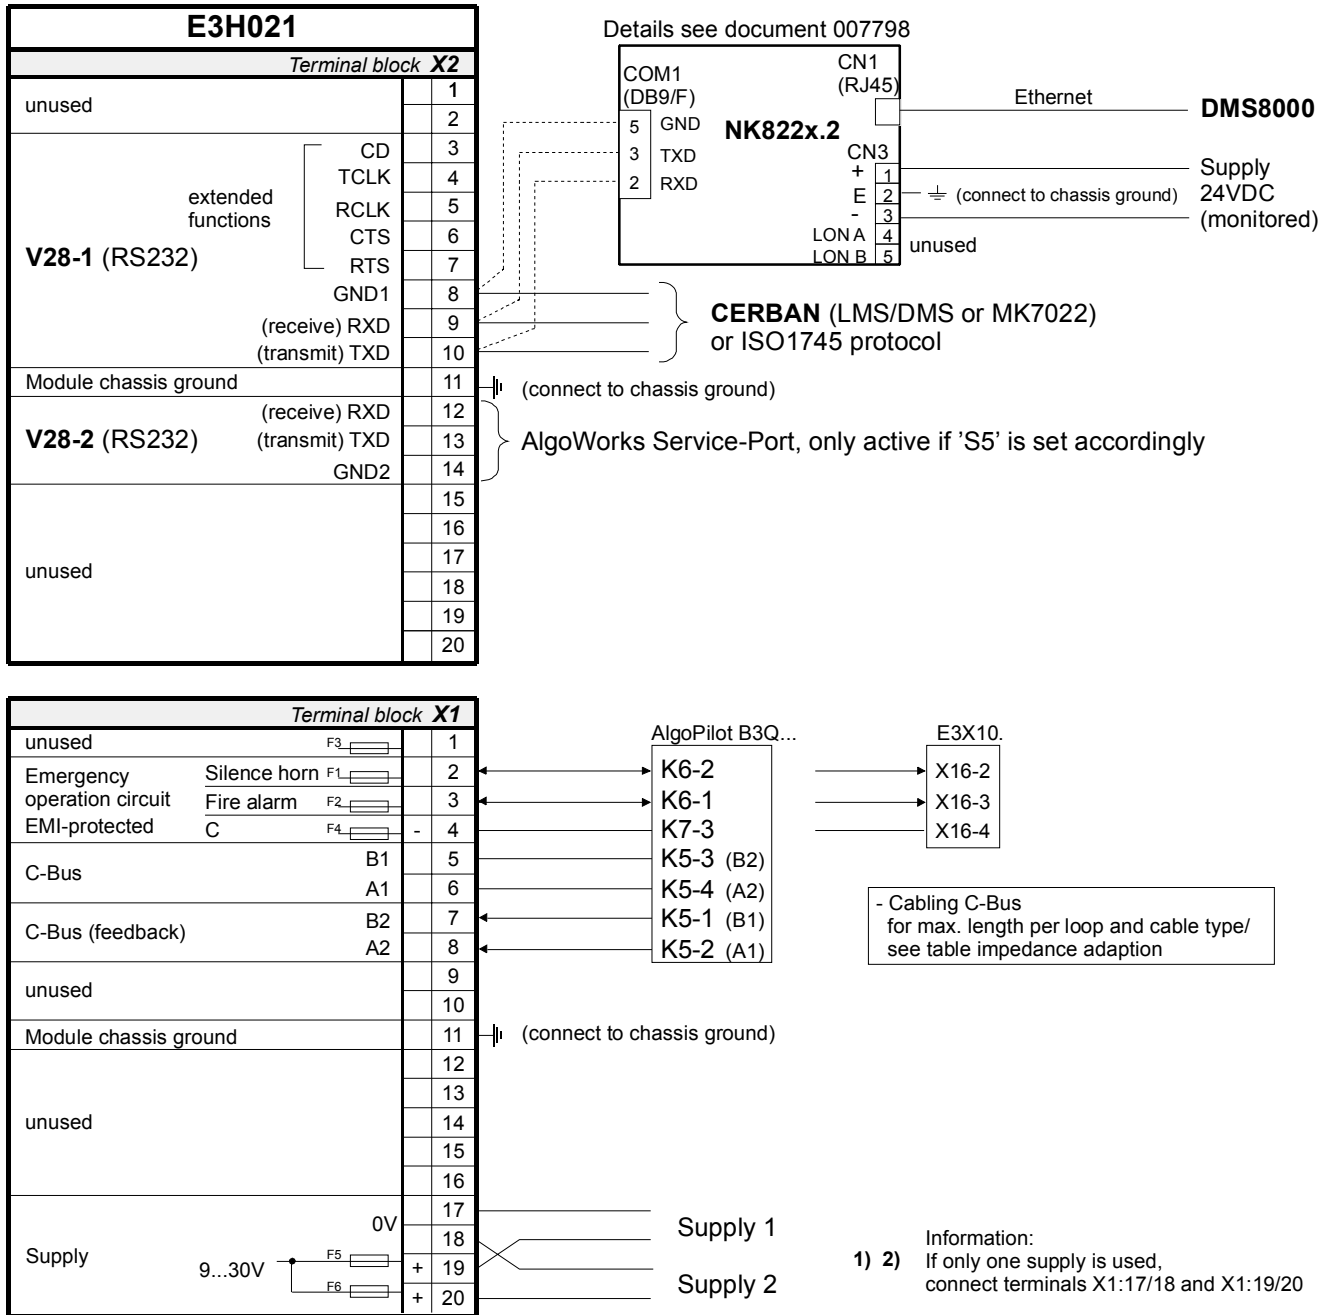

- 1) Supply 2 for double supply if E3H021 is fitted but supplied by the control panel with 24 V. For details → see Principle of power supply on chapter 14.5
- 2) Configuration as input/output → see bridges X15 or R15, X16 or R16, Y15, Y16, Y17, Y18 in table legend 14